

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
ZX-16	1.4L KFX BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.6L NFV BOSCH M7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.6L N6A BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KFX MM1AP	√	√	√	√		
	2.0L RFS MM1AP	√	√	√	√		
	ABS	√	√	√	√	√	1.air bleed
	AL4 TA2000 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set
	AL4 TA96 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set 4.padal programing
ZX-2	1.4L KFX BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.6L NFV BOSCH M7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.6L N6A BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KFX MM1AP	√	√	√	√		
	2.0L RFS MM1AP	√	√	√	√		
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.4L KFX BOSCH MP5.2	√	√	√	√		
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	ABS 5.3	√	√	√	√	√	1.air bleed

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
ELYSEE	ABS8.1 BOSCH	√	√	√	√		
	AL4 TA2000 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set
	AL4 TA96 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set 4.padal programing
	Simens center airbag	√	√	√	√		
	AUTOLIV center airbag	√	√	√			1.Ecu set
	electron key	√	√	√	√	√	1.Program set
	C1	DV4 injection	√	√	√	√	
Sequential manual gearbox (MMT)					√		
ABS anti-lock braking system			√	√	√		
ESP S2000 ABS		√	√	√	√		
	1.6L NFV BOSCH M7.4.4	√	√	√	√	√	1.mutomatic regulator 2.manual add
	1.6L NFU BOSCH ME7.4.5	√	√	√	√	√	1.mutomatic regulator 2.Ecu set
	2.0L RFN MAGNETI MARELLI MM48P	√	√	√	√	√	1.mutomatic regulator
	2.0L RFN MAGNETI MARELLI MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
XSARA PICASSO	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFS BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	6FZ SAGEM S2000PM1	√	√	√	√	√	1.Configuration
	6FZ SAGEM S2000PM2	√	√	√	√	√	1.Configuration
	2.0L BOSCH EDC15C2	√	√	√	√		
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	9HY BOSCH EDC16C3 DV6TED4	√	√	√	√		
	9HZ(FAP) BOSCH EDC16C34 EV6TED4	√	√	√	√		
	BSI	√	√	√	√	√	1.Programming of keys
	AUTOLIV center airbag	√	√	√			1.manual add 2.Ecu unlocked
	AL4 TA2000 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set
	ABS BOSCH 5.3	√	√	√	√	√	1.air bleed
	ESP BOSCH 5.7	√	√	√	√	√	1.air bleed 2.Ecu set
ABS 8.0 Without esp8.0	√	√	√	√	√	1.air bleed 2.manual add	

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	ABR 5.3	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
	ESP8.0 BOSCH	√	√	√	√		
	alarm	√	√	√	√	√	1.manual add
	IP	√	√	√	√	√	1.manual add
	radio	√	√	√	√	√	1.manual add
	rain sensor	√	√	√	√		
	conversion module below steering wheel	√	√	√	√		
	CD player	√	√	√	√	√	
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	A/C	√	√	√	√	√	1.Ecu set
	display	√	√	√	√	√	1.manual add
	PTS	√	√	√	√	√	
	2.0L BOSCH EDC15C2	√	√	√	√		
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HY BOSCH EDC16C3 DV6TED4	√	√	√	√		
	6FZ SAGEM S2000PM2	√	√	√	√	√	1.Configuration
	6FZ SAGEM S2000PM1	√	√	√	√	√	1.Configuration
	NFS BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
XSARA PICASSO CHINE	1.6L NFV BOSCH M744	√	√	√	√		
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFN MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4	√	√	√	√		
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	ABS8.1 BOSCH	√	√	√	√		
	ABS8 BOSCH	√	√	√	√		
	ABR5.3	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
	ESP8 BOSCH	√	√	√	√		
ESP BOSCH5.7	√	√	√	√			
	2.0L RFN MAGNETI MARELLI MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHZ BOSCH EDC15C2	√	√	√	√		
	8HZ BOSCH EDC16C3(DV4)	√	√	√	√		
	2.0L RFS MM48P	√	√	√	√	√	1.Configuration

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
XSARA2	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	RFN MM4MP2	√	√	√	√	√	
	1.4L KFW SAGEM S2000P	√	√	√	√		
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	AUTOLIV center airbag	√	√	√			1.manual add 2.Ecu unlocked
	AL4 TA2000 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 1.Ecu set
	ABS BOSCH 5.3	√	√	√	√	√	1.air bleed
	ESP BOSCH 5.7	√	√	√	√	√	1.air bleed 2.Ecu set
	BSI_VAR_C	√	√	√		√	
	IP	√	√	√	√	√	1.manual add
	display	√	√	√	√	√	1.manual add
	radio	√	√	√	√	√	1.manual add
	CD player	√	√	√	√	√	
	A/C	√	√	√	√	√	1.Ecu set
	PTS	√	√	√	√	√	
	conversion module below steering wheel	√	√	√	√		
	1.4L KFV SAGEM J34P	√	√	√	√	√	1.manual add

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C2 CHINA	1.6L NFU BOSCH ME7.4.5	√	√	√	√	√	1.mutomatic regulator 2.Ecu set
	BSI	√	√	√	√	√	1.Programming of keys
	ABS MK70	√	√	√	√	√	1.air bleed 2.manual add
	A/C	√	√	√	√	√	1.manual add
	AUTOLIV center airbag	√	√	√			1.manual add 2.Ecu unlocked
	AL4 TA2000 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set
	IP	√	√	√	√	√	1.manual add
	conversion module below steering wheel	√	√	√	√		
XSARA	2.0L RFV BOSCH MP5.2	√	√	√	√		
	2.0L RFS MM1AP	√	√	√	√		
	1.8L LFX MM1AP	√	√	√	√		
	1.6L NFZ BOSCH MP5.2	√	√	√	√		
	1.4L KFX BOSCH MP5.2	√	√	√	√		
	1.6L NFZ BOSCH MP7.2	√	√	√	√		
	1.4L KFX BOSCH MP7.3	√	√	√	√	√	1.Configuration
	1.4L KFX SAGEM SL96	√	√	√	√		
	1.8L LFY SAGEM SL96	√	√	√	√		
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	1.9L DHV BOSCH AS3-VP20	√	√	√	√		
	Auto gearbox AL4 TA96	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	ABS mechanical distribution	√	√	√	√		
	ABS electronic distribution	√	√	√	√		
	Airbag	√	√	√			
	Air Conditioning	√	√	√	√		
	BSI	√	√	√		√	
	CONTROL PANEL	√	√	√	√		
	RADIO	√	√	√	√		
	CD PLAYER	√	√	√	√		
	display SAGEM B	√	√	√	√	√	
	ALARM	√	√	√	√	√	
C5	3.0L XFX BOSCH ME7.4.6	√	√	√	√	√	1.mutomatic regulator 2.Program set
	2.0L RLZ SIEMENS SIRIUS81	√	√	√	√		
	2.0L RFN MAGNETI MARELLI MM6LP	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives
	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	1.8L 6FZ SAGEM S2000P	√	√	√	√		
	6FZ SAGEM S2000PM1	√	√	√	√	√	1.Configuration
	2.2L 4HX BOSCH EDC15C2	√	√	√	√		
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHS BOSCH EDC15C2	√	√	√	√		
	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	ABS TEVES MK60	√	√	√	√	√	
	ESP TEVES MK60	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	Auto gearbox 4HP20	√	√	√	√	√	1.mutomatic regulator
	Auto gearbox AL4	√	√	√	√	√	1.mutomatic regulator
	Airbag	√	√	√			
	Air Conditioning	√	√	√	√	√	
	BSI	√	√	√	√	√	
	RADIO	√	√	√	√	√	
	Diesel additive function(ADDITIF FAP)	√	√	√	√	√	1.Configuration
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	RAIN SENSOR	√	√	√	√		
	SWITCH	√	√	√	√		
	CONTROL PANEL	√	√	√	√	√	
	Display or autoPC telematics	√	√	√	√	√	
	ALARM	√	√	√	√	√	
	4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	9HY BOSCH EDC16C34 DV6TED4	√	√	√	√		
	9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	6FZ SAGEM S2000PM2	√	√	√	√	√	1.Configuration
	XFU BOSCH ME747	√	√	√	√		
	XFV BOSCH ME747	√	√	√	√		
	6FY MM6LPB	√	√	√	√		
	RHL SIEMENS SID803	√	√	√	√		
	4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	2.2L 4HX BOSCH EDC15C2	√	√	√	√		
	4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
NEW C5	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	RHR SIEMENS SID803	√	√	√	√		
	RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration
	Auto gearbox AL4	√	√	√	√		
	Auto gearbox AM6	√	√	√	√		
	Alarm	√	√	√			
	BSI	√	√	√			
	CD play	√	√	√			
	control panel	√	√	√			
	Diesel additive function(ADDGO3)	√	√	√	√	√	1.Configuration
	ERU_BSM	√	√	√			
	Auto gearbox 4HP20	√	√	√	√		
	ESP	√	√	√	√		
	multifunction screen C-	√	√	√			
	passenger door module	√	√	√			
	Power Steering	√	√	√			
	Radio	√	√	√			
	rain sensor-brightness	√	√	√			
	SRS	√	√	√			
steering wheel with fixed central control	√	√	√				
AC	√	√	√				
	6FY MM6KP(EW7A)	√	√	√	√		
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C5(X7)	RFJ MM6KP(EW10A)	√	√	√	√		
	RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
	RHR DELPHI DCM3.4	√	√	√	√	√	1.Configuration
	RHF DELPHI DCM3.4	√	√	√	√		
	UHZ SIEMENS SID201	√	√	√	√		
	X8Z-DT20C EDC17CP11	√	√	√	√		
	RHH DCM3.5	√	√	√	√		
	RHE DCM3.5	√	√	√	√		
	XFU BOSCH ME747	√	√	√	√		
	XFV BOSCH ME747	√	√	√	√		
	4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	Auto gearbox AL4	√	√	√	√		
	Auto gearbox AM6	√	√	√	√		
	BVA AM6 Euro5	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
C6	UHZ SIEMENS SID201	√	√	√	√		
	XFU BOSCH ME747	√	√	√	√		
	XFV BOSCH ME747	√	√	√	√		
	4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	Auto gearbox AM6	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
	ESP VSC440	√	√	√	√		
C3	1.1L HFX MM48P	√	√	√	√	√	1.mutomatic regulator
	1.6L NFU BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KfV SAGEM S2000 PM1	√	√	√	√	√	1.mutomatic regulator
	N6A BOSCH ME744	√	√	√	√	√	1.mutomatic regulator
	NFS BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFU MM6LP	√	√	√	√		
	KfV BOSCH ME744	√	√	√	√		
	KfV SAGEM S2000PM2	√	√	√	√	√	
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√		
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√		
	8HX BOSCH EDC16C34 DV4TD	√	√	√	√		
	8HX SIEMENS SID802	√	√	√	√		
	8HX SIEMENS SID804	√	√	√	√		
	8HZ SIEMENS SID804	√	√	√	√		
	8HY DELPHI C6	√	√	√	√		
	ABS TEVES MK60	√	√	√	√	√	
	ABS TEVES MK70	√	√	√	√	√	
	ESP TEVES MK60	√	√	√	√		
	Controlled manual gearbox ECU	√	√	√	√		
Airbag	√	√	√	√			

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	Air Conditioning	√	√	√	√	√	
	BSI	√	√	√	√		
	RADIO	√	√	√	√	√	
	RAIN SENSOR	√	√	√	√		
	SWITCH	√	√	√	√		
	ALARM	√	√	√	√	√	
	CONTROL PANEL	√	√	√	√	√	
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	DISPLAY	√	√	√	√	√	
	Auto gearbox AL4	√	√	√	√	√	1.mutomatic regulator
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME7.4.5	√	√	√	√		
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√		
	9HV BOSCH EDC16C34 DV6TED4	√	√	√	√		
	9HY BOSCH EDC16C34 DV6TED4	√	√	√	√		
	9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	RHR DELPHI DCM3.4	√	√	√	√	√	1.Configuration
	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C4	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFK MM6LP	√	√	√	√		
	KFU MM6LP	√	√	√	√		
	RFN MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	6FY MM6LPB	√	√	√	√		
	RHF DELPHI DCM3.4	√	√	√	√		
	5FX MED17.4	√	√	√	√		
	5FT MED17.4	√	√	√	√		
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	RHR SIEMENS SID803	√	√	√	√		
	RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration
	ABS8 BOSCH	√	√	√	√		
	ESP8 BOSCH	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√		
	AC	√	√	√	√		
	Auto gearbox AM6	√	√	√	√		
	CFC300P	√	√	√	√		
BVA AM6 Euro5	√	√	√	√			

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	Auto gearbox AL4	√	√	√	√		
	Alarm	√	√	√	√		
	BSI	√	√	√			
	CD play	√	√	√	√		
	control panel	√	√	√	√		
	engine relay unit	√	√	√	√		
	multifunction screen A+	√	√	√	√		
	multifunction screen C-	√	√	√	√		
	passenger door module	√	√	√	√		
	Radio	√	√	√	√		
	rain sensor-brightness	√	√	√			
	SRS	√	√	√	√		
	steering wheel with fixed central control	√	√	√	√		
	unit rev counter	√	√	√	√		
		Diesel additive function(ADDGO3)	√	√	√	√	√
C4 PICASSO	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	6FY MM6LPB	√	√	√	√		
	5FX MED17.4	√	√	√	√		
	5FT MED17.4	√	√	√	√		
	RHE DCM3.5	√	√	√	√		
	RHH DCM3.5	√	√	√	√		
	RHD DCM3.5	√	√	√	√		
	RHJ SIEMENS SID803A	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration
	Auto gearbox AL4	√	√	√	√		
	Auto gearbox AM6	√	√	√	√		
	BVA AM6 Euro5	√	√	√	√		
	CFC300P	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
C4 SEDAN	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√		
	9HX BOSCH EDC16C34 DV6ATED4-90CV	√	√	√	√		
	RFJ MM6KP (EW10A FF)	√	√	√	√		
	RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
	RHM BOSCH EDC15C2 DW10A	√	√	√	√		
	RHS BOSCH EDC15C2 DW10A	√	√	√	√		
	RHT BOSCH EDC15C2 DW10A	√	√	√	√		
	RHW BOSCH EDC15C2 DW10A	√	√	√	√		
	RHZ BOSCH EDC15C2 DW10A	√	√	√	√		
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	ABS8.1 BOSCH	√	√	√	√		
	ABS8 BOSCH	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
	ESP8. BOSCH	√	√	√	√		
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME7.4.5	√	√	√	√		
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√		
	TU3A J34P	√	√	√	√		
	TU1A J34P	√	√	√	√		
	KFU MM6LPC	√	√	√	√		
	8HZ SIEMENS SID806	√	√	√	√		
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFV SAGEM S2000PM2	√	√	√	√	√	
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
NEW C3	9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	ABS MK70.1	√	√	√	√		
	ESP MK60	√	√	√	√		
	ESP MK60-O	√	√	√	√		
	ABS MK70	√	√	√	√		
	AC	√	√	√	√		
	Controlled manual gearbox ECU	√	√	√	√		
	Auto gearbox AL4	√	√	√	√		
	Alarm	√	√	√	√		
	BSI	√	√	√	√		
	CD play	√	√	√	√		
	control panel	√	√	√	√		
	electric power steering ECU	√	√	√	√		
	engine relay unit	√	√	√	√		
	multifunction screen A+	√	√	√	√		
	multifunction screen C-	√	√	√	√		
	Radio	√	√	√	√		
	rain sensor-brightness	√	√	√			
	SRS	√	√	√	√		
	switch module at the steering wheel	√	√	√	√		
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√		
	8HZ SIEMENS SID806	√	√	√	√		
	TU3A J34P	√	√	√	√		
	TU1A J34P	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C3 PLURIEL	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Controlled manual gearbox ECU	√	√	√	√		
	ABS MK70	√	√	√	√		
	ABS MK70.1	√	√	√	√		
	ESP MK60-O	√	√	√	√		
ESP MK60	√	√	√	√			
C3 PICASSO	8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√		
	9HX BOSCH EDC16C34 DV6ATED4-90CV	√	√	√	√		
	5FW MEV17.4	√	√	√	√		
	ABS MK70.2	√	√	√	√		
	ESP MK60	√	√	√	√		
	1.1L HFX MM48P	√	√	√	√	√	1.mutomatic regulator
	1.6L NFU BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KfV SAGEM S2000 PM1	√	√	√	√	√	1.mutomatic regulator
	KfV SAGEM S2000PM2	√	√	√	√	√	
	NFS BOSCH ME744	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C2 VAN	8HZ SIEMENS SID804	√	√	√	√		
	8HX SIEMENS SID804	√	√	√	√		
	8HX SIEMENS SID802	√	√	√	√		
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√		
	8HX BOSCH EDC16C34 DV4TD	√	√	√	√		
	ABS TEVES MK70	√	√	√	√	√	
	ESP TEVES MK60	√	√	√	√		
	Controlled manual gearbox ECU	√	√	√	√		
	Central airbag	√	√	√	√		
	Air Conditioning	√	√	√	√	√	
	BSI	√	√	√	√		1.Programming of keys
	RADIO	√	√	√	√	√	
	RAIN SENSOR	√	√	√	√		
	SWITCH	√	√	√	√		
	ALARM	√	√	√	√	√	
	CONTROL PANEL	√	√	√	√	√	
	DISPLAY	√	√	√	√	√	
	Auto gearbox AL4	√	√	√	√		
XANTIA	1.8L LFY SAGEM SL96	√	√	√	√		
	2.0L RFT BOSCH MP3.2	√	√	√	√		
	2.0L RFY BOSCH MP3.2	√	√	√	√		
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		
	2.1L P8C LUCAS EPIC	√	√	√	√		
	2.0L RFV BOSCH MP5.1.1	√	√	√			
	1.8L LFY BOSCH MP5.1.1	√	√	√			

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	2.0L RGX BOSCH MP3.2	√	√	√	√		
	2.0L RFV BOSCH MP5.2	√	√	√	√		
	2.0L R6E BOSCH MP5.2	√	√	√	√		
	1.8L LFX MM1AP	√	√	√	√		
	3.0L XFZ BOSCH MP7.0	√	√	√	√		
XANTIA2	2.0L RFV BOSCH MP5.2	√	√	√	√	√	
	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RGX BOSCH MP3.2	√	√	√	√		
	2.0L R6E BOSCH MP5.2	√	√	√	√		
	2.1L P8C LUCAS EPIC	√	√	√	√		
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		
	1.8L LFY SAGEM SL96	√	√	√	√		
	1.8L LFX MM1AP	√	√	√	√		
	1.8L LFY BOSCH MP7.3	√	√	√	√	√	
	1.6L BFZ MM48P	√	√	√	√	√	
	3.0L XFZ BOSCH MP7.0	√	√	√	√		
	AIRBAG AND SEATBELT(SAC_AKF)	√	√	√			1.Program set
	LEFT SIDE AIRBAG	√	√	√		√	
	RIGHT SIDE AIRBAG	√	√	√		√	
	CPH(CPH_TEXTON)	√	√	√	√	√	1.Program set
	ABS(TEVES_MK20E)	√	√	√	√	√	1.air bleed
		1.4L KFX MM1AP	√	√	√	√	
1.6L NFX MM1AP		√	√	√	√		
1.6L NFT BOSCH M7.4.4		√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
SAXO	1.6L NFZ BOSCH MP7.2	√	√	√	√		
	1.6L NFZ BOSCH MP5.2	√	√	√	√		
	1.6L NFZ BOSCH MP5.1	√	√	√			
	1.6L NFX MM48P	√	√	√	√		
	1.4L KFX BOSCH MP7.3	√	√	√	√	√	1.Configuration
	1.4L KFW SAGEM S2000	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1.0L CDY/CDZ BOSCH MA3.1	√	√	√			
	1.1L HDY/HDZ BOSCH MA3.1	√	√	√			
	1.1L HFX BOSCH M7.4.4	√	√	√	√	√	
	AT	√	√	√	√		
	ABS	√	√	√	√	√	1.air bleed
	AUTOLIV CENTRAL airbag	√	√	√			1.Ecu set
	Electric key	√	√	√	√	√	
		2.0L RFN MM48P	√	√	√	√	√
3FZ MM4MP2		√	√	√	√		
RFN MM4MP2		√	√	√	√	√	
RFN MM6LP		√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
3FZ MM6LP		√	√	√	√		
3.0L XFW BOSCH ME746		√	√	√	√		
2.2L 4HW BOSCH EDC15C2		√	√	√	√		
2.0L RHT BOSCH EDC15C2		√	√	√	√		
2.0L RHW BOSCH EDC15C2		√	√	√	√	√	1.Configuration
2.0L RHZ BOSCH EDC15C2		√	√	√	√	√	1.Configuration

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C8 VAN	2.0L RHM BOSCH EDC15C2	√	√	√	√		
	Switch module at the steering wheel	√	√	√	√		
	Radio post-equipment	√	√	√	√		
	Telematic receiver command	√	√	√	√		
	Driver's door module	√	√	√	√		
	Multifunction display SAGEM B	√	√	√	√		
	Telematic unit	√	√	√	√		
	Control panel	√	√	√	√		
	Airbag	√	√	√	√		
	Diesel additive function(ADDITIF FAP)	√	√	√	√	√	1.Configuration
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	Air conditioning	√	√	√	√		
	Additional heating	√	√	√	√		
	Auto geatbox AL4	√	√	√	√		
	Auto geatbox 4HP20	√	√	√	√		
	ABR5.7	√	√	√	√		
	ESP BOSCH5.7	√	√	√	√		
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox	√	√	√	√	√	
	ABS	√	√	√	√	√	
	Airbag	√	√	√	√	√	
	BSI	√	√	√	√	√	1.Programming of keys
	Automatic A/C	√	√	√	√	√	
	Alarm	√	√	√	√	√	

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
Triomphe	Multifunction display C	√	√	√	√	√	
	Radio post-equipment	√	√	√	√	√	
	CD player	√	√	√	√		
	Engine service box	√	√	√	√	√	
	Parking assistance	√	√	√	√	√	
	Power steering	√	√	√	√		
	Instrument cluster	√	√	√	√	√	
	Driver door module	√	√	√	√	√	
	Passenger door module	√	√	√	√	√	
	Rain sensor/Brightness	√	√	√			
	Free hand components	√	√	√	√	√	
	Adjustable Headlight	√	√	√	√	√	
	Switch module at the steering wheel	√	√	√	√	√	
	Tachometer control box	√	√	√	√	√	
Berlingo	1. 1L HDY/HDZ BOSCH MA3. 1	√	√	√			
	1. 1L HFX BOSCH M7. 4. 4	√	√	√	√		
	1. 4L KFW SAGEM S2000	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1. 4L KFX SAGEM SL96	√	√	√	√		
	1. 4L KFX BOSCH MP7. 3	√	√	√	√	√	1.Configuration
	1. 6L NFU BOSCH ME7. 4. 4	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1. 8L LFX MM1AP	√	√	√	√		
	2. 0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	1. 9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	ABS electronic distribution	√	√	√	√		
	Airbag TRW/(SAC_TRW)	√	√	√			
	Airbag AUTOLIV/(SAC_AKF)	√	√	√			
	Radio post-equipment	√	√	√			
	CD player	√	√	√			
	Control panel	√	√	√			
Berlingo2	2. 0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFV SAGEM S2000PM1	√	√	√	√		
	KFV SAGEM S2000PM2	√	√	√	√	√	
	NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	TU3A J34P	√	√	√	√		
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√		
	NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	1. 9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	ABS8.1 BOSCH	√	√	√	√		
	ABS8 BOSCH	√	√	√	√		
	ABR5.3	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	ESP8.1 BOSCH	√	√	√	√		
	ESP BOSCH5.7	√	√	√	√		
	ESP8.0 BOSCH	√	√	√	√		
	Additional heating (Chauff-add)	√	√	√			
	Airbag (SAC_AUTOLIV)	√	√	√			
	BSI	√	√	√			
	Control panel	√	√	√			
	Radio post-equipment	√	√	√			
	CD player (Changeur-cd)	√	√	√			
	Parking assistance (Aide_stat)	√	√	√			
	Alarm (Alarme_texton)	√	√	√			
	Switch module at the steering wheel (COM2000)	√	√	√			
	Rain sensor/Brightness (Pluie_luminosite)	√	√	√			
	Multifunction display SAGEM A	√	√	√			
	Multifunction display SAGEM B	√	√	√			
Berlingo(B9)	9HT BOSCH EDC16C34 DV6BUTED4-75CV	√	√	√	√		
	9HT BOSCH EDC16C34 DV6BTED4-75CV	√	√	√	√		
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√		
	9HX BOSCH EDC16C34 DV6ATED4-90CV	√	√	√	√		
	9HV FAP BOSCH EDC16C34 DV6TED4B-90CV	√	√	√	√		
	9HS FAP BOSCH EDC16C34 DV6TED4BU-90CV	√	√	√	√		
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	ABS8.1 BOSCH	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
	KFU MM6LPC	√	√	√	√		
	TU1A J34P	√	√	√	√		
	TU3A J34P	√	√	√	√		
	N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFV SAGEM S2000PM2	√	√	√	√	√	
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration
	8HZ BOSCH EDC16C34 DV4TD	√	√	√			
	8HX BOSCH EDC16C34 DV4TD	√	√	√			
	8HZ SEIMENS SID806	√	√	√	√		
	AC	√	√	√			

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C2 CANBUS	Controlled manual gearbox ECU	√	√	√			
	Alarm	√	√	√			
	BSI	√	√	√			
	CD player	√	√	√			
	Control panel	√	√	√			
	TELEMATIC RT3	√	√	√			
	TELEMATIC RT4	√	√	√			
	ABS MK70	√	√	√	√		
	ABS MK70.1	√	√	√	√		
	ESP MK60	√	√	√	√		
	ESP MK60-O	√	√	√	√		
	Controlled manual gearbox ECU	√	√	√	√		
	ECU reversible stopstart alternator	√	√	√			
	electric power steering ECU	√	√	√			
	engine relay unit	√	√	√			
	multifunction screen	√	√	√			
	radio	√	√	√			
	rain sensor-brightness	√	√	√			
	SRS	√	√	√			
	Switch module at the steering wheel	√	√	√			
	Parking assistance	√	√	√			
	Trailer relay unit	√	√	√			
	Hands free kit	√	√	√			
High frequency receiver	√	√	√				
	BSI	√	√	√			

Citroen V38.00 Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C8 CANBUS	Petrol/RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Diesel/4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	Diesel/4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	Diesel/4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	Diesel/4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration
	Diesel/RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration
	Diesel/RHK SIEMENS SID803A	√	√	√	√		
	Diesel/2.2L 4HW BOSCH EDC15C2	√	√	√	√		
	Diesel/2.0L RHT BOSCH EDC15C2	√	√	√	√		
	Diesel/2.0L RHM BOSCH EDC15C2	√	√	√	√		
	Diesel/2.0L RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	Diesel/2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	Diesel additive function	√	√	√	√	√	1.Configuration
	Airbag	√	√	√			
	Gearbox ECU/Auto gearbox AL4	√	√	√	√		
	Gearbox ECU/Auto gearbox AM6	√	√	√	√		
	Anti-lock brake system/ESP8.1 BOSCH	√	√	√	√		
	Anti-lock brake system/ESP8 BOSCH	√	√	√	√		
	Multifunction screen/Colour multifunct	√	√	√			
	Multifunction screen/Multifunction dis	√	√	√			
	Telematics/Telematics(RT3)	√	√	√			
	Telematics/Telematics(RT4)	√	√	√			
	Instrument panel	√	√	√			
Air conditioning	√	√	√				

Citroen V38.00 Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	alarm	√	√	√			
	Control panel	√	√	√			
	engine relay unit	√	√	√			
	Power steering	√	√	√			
	Radio	√	√	√			
	Rain sensor/Brightness	√	√	√			
	Driver's door module	√	√	√			
	Passenger's door module	√	√	√			
	Sliding side doors module	√	√	√			
	Switch module at the steering wheel	√	√	√			
	BSI	√	√	√			
	Control panel	√	√	√			
	Radio	√	√	√			
	CD player	√	√	√			
	Parking assistance	√	√	√			
	Air conditioning	√	√	√			
	Rear air conditioning panel	√	√	√			
	Switch module at the Steering wheel	√	√	√			
	alarm	√	√	√			
	Rain sensor/Brightness	√	√	√			
	Airbag	√	√	√			
	Multifunction screen/Multifunction scr	√	√	√			
	Multifunction screen/Multifunction scr	√	√	√			
	Telematics/Telematics (RT3)	√	√	√			
	Telematics/Telematics (RT4)	√	√	√			

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
DISPATCH 3 / JUMPY 3	Petrol/RFH MM6KP	√	√	√	√		
	Diesel/9HU BOSCH EDC16C34 DV6UTD4-90CV	√	√	√	√		
	Diesel/RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration
	Diesel/RHK SIEMENS SID803A	√	√	√	√		
	Diesel/RHG SIEMENS SID803A	√	√	√	√		
	ABS/ESP8 BOSCH	√	√	√	√		
	ABS/ABS8.1 BOSCH	√	√	√	√		
	ABS/ESP8.1 BOSCH	√	√	√	√		
	ABS/ABS8 BOSCH	√	√	√	√		
	Power steering/Electric power steering	√	√	√			
	Pneumatic suspension/Suspension	√	√	√			
	Additional heating(KWP)	√	√	√			
	Trailer relay unit	√	√	√			
	engine relay unit	√	√	√			
	Hands Free Kit	√	√	√			
Bodywork Conversion Unit	√	√	√				
DISPATCH / JUMPY	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	2.0L RHX BOSCH EDC15C2	√	√	√	√		
	2.0L RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		
	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	Auto gearbox AL4	√	√	√	√		
	ABR5.3	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
DISPATCH 2 / JUMPY 2	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	2.0L RHX BOSCH EDC15C2	√	√	√	√		
	2.0L RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	Auto gearbox AL4	√	√	√	√		
	ABR5.3	√	√	√	√		
XM	2.0L R6E BOSCH MP5.2	√	√	√	√		
	2.0L RGY BOSCH MP3.2	√	√	√	√		
	2.0L RFZ BOSCH MP5.1	√	√	√	√		
	2.0L RGX BOSCH MP3.2	√	√	√	√		
	2.0L RFV BOSCH MP5.2	√	√	√	√		
	3.0L XFZ BOSCH MP7.0	√	√	√	√		
	2.5L THY BOSCH MSA11 VP36	√	√	√	√		
	2.0L RFV BOSCH MP5.1.1	√	√	√			
	ABS TEVES MK20E	√	√	√	√		
XM mux	2.5L THY MSA11 7.6 VP36	√	√	√	√		
	ABS TEVES MK20E	√	√	√	√		
JUMPER 3 /RELAY 3	DCU-102 4HU PUMA 120 CV	√	√	√	√		
	DCU-102 4HV PUMA 100 CV	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV FAP	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV	√	√	√	√		
	ABS8 BOSCH	√	√	√	√		
	ASR8.0	√	√	√	√		
	ESP8 BOSCH	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
JUMPER 3 Minibus/RELAY 3 Minibus	DCU-102 4HU PUMA 120 CV	√	√	√	√		
	DCU-102 4HV PUMA 100 CV	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV FAP	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV	√	√	√	√		
SYNERGIE/EVASION	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	2.0L RGX BOSCH MP3.2	√	√	√	√		
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		
	2.0L RFV BOSCH MP7.3	√	√	√	√		
	2.0L RHW BOSCH EDC15C2	√	√	√		√	1.Configuration
	2.0L RHZ BOSCH EDC15C2	√	√	√		√	1.Configuration
	Auto gearbox AL4	√	√	√	√		
ABR5.3	√	√	√	√			
C15	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
C-QUATRE 4	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
C-QUATRE 5	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4	√	√	√	√		

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
	ABS8.1 BOSCH	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√		
FUKANG	1.4L KFX BOSCH MP5.2	√	√	√	√		
	1.6L NFZ BOSCH MP5.2	√	√	√	√		
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4 TA96	√	√	√	√		
	Auto gearbox AL4 TA2000	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√		
	ABR5.3	√	√	√	√		
FUKANG 988	1.4L KFX BOSCH MP5.2	√	√	√	√		
	1.6L NFZ BOSCH MP5.2	√	√	√	√		
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4 TA96	√	√	√	√		
	Auto gearbox AL4 TA2000	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√		
	ABR5.3	√	√	√	√		
C-ELYSEE 4	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU J35	√	√	√	√		
	Auto gearbox AL4 TA2000	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√		
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V38.00** Diagnostics List (Note:For reference only)

Vehicle	ECU Type	Functions					
		recognize	Read Dtc	Clear Dtc	Data Stream	actuation	Special Function
C-ELYSEE 5	NFU J35	√	√	√	√		
	Auto gearbox AL4 TA2000	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√		

(*):Tested;

(?):Manual on website(www.x431.com)

Note: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBD	For all the cars except ZX-2, Triomphe, new C3, C4, New C5	N/A
OBD 16C	For all the cars except ZX-2, Triomphe, new C3, C4, New C5	N/A
CANBUS II	Just for Triomphe, new C3, C4, New C5, And need to add Peugeot/Citroen Connector to test.	N/A
diagun connector	N/A	For all the cars except ZX-2
SUPER 16	For all the cars except ZX-2	N/A