

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
106REMOD ELAGE	Petrol engine	CDY BOSCH MA3.1	√	√	√			
		CDZ BOSCH MA3.1	√	√	√			
		HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			
		HFX BOSCH M7.4.4	√	√	√	√		
		KFX BOSCH MP7.3	√	√	√	√		
		KFX MM1AP	√	√	√	√		
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		NFX MM1AP	√	√	√	√		
107	AT	controlled manual gearbox(MMT)				√		
1007 CAN	Petrol engine	KFU MM6LPC	√	√	√	√		
		KFV J34P	√	√	√	√		
		NFU BOSCH ME7.4.5	√	√	√	√		
	Diesel engine	8HX SID 806 DV4	√	√	√	√		
		8HZ SID 806 DV4	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
Petrol engine	NFU ME744	√	√	√	√			
	KFV J34P	√	√	√	√			
	KFV S2000PM2	√	√	√	√			
	KFU MM6LP	√	√	√	√			
	N6A BOSCH ME7.4.5	√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
1007 VAN		N6B BOSCH ME7.4.5	√	√	√	√		
		NFU BOSCH ME7.4.5	√	√	√	√		
	Diesel engine	8HZ SIEMENS SID 804	√	√	√	√		
		8HX SIEMENS SID804	√	√	√	√		
	ABS	ESP MK60	√	√	√	√		
	A/T	Controlled manual gearbox(BVMP)	√	√	√	√		
	Air bag	Airbag ECU	√	√	√	√		
Petrol engine		NFU BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		RFR MM48P	√	√	√	√	√	
		N6A BOSCH ME745	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Program design/Mtich
		NFU BOSCH ME745	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Program design/Mtich
		N6A BOSCH ME744 FLEX FUEL	√	√	√	√	√	1.Initialization Adapation
		N6A BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		RFN MM48P	√	√	√	√	√	1.Initialization Adapation
		KFX BOSCH MP7.3	√	√	√	√		
		KFX MM1AP	√	√	√	√		
		KFU MM6LP	√	√	√	√		1.Initialization Adapation

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206		HFZ MM1AP	√	√	√	√		
		HFY MM1AP	√	√	√	√		
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6C MM1AP	√	√	√	√		
		HFX MM4.8P	√	√	√	√	√	
		RFK MM6LP	√	√	√	√		1.Initialization Adapation
		RFN MM6LP	√	√	√	√		1.Initialization Adapation
		7LZ MM5NP	√	√	√			
		KFW BOSCH ME7.4.4	√	√	√			
		NFZ BOSCH MP7.2	√	√	√	√		
		NFU J35	√	√	√	√		
	Diesel engine	WJY LUCAS DCN2	√	√	√	√		
		WJZ LUCAS DCN2	√	√	√	√		
		8HX BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√		
	ABS	ABS MK70	√	√	√	√	√	1.Marchting 2.air bleed
		ESP MK60	√	√	√	√		

PEUGEOT V40.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Anti-lock brakes TEVES (ABS BOSCH 5.3)	√	√	√	√	√	1.air bleed
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Accelebration pedal 4.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	
		Electric pump unit(power steering)	√	√	√	√		
	IP	Instrument panel	√	√	√	√	√	1.Marchting
		BSI	√	√	√	√	√	1.Initialization Adaption 2.key program
	A/C	Air conditioning	√	√	√	√	√	1.Marchting
		Alarm	√	√	√	√	√	
	Driver information	Display/Telematics	√	√	√	√	√	1.Marchting
		on-board navigation system	√	√	√	√		
		Radio	√	√	√	√	√	1.Marchting
		CD Player	√	√	√	√	√	1.Marchting
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√			1.Marchting 2.lock and unlock

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
206 MUX	Petrol engine	HFX MM48P	√	√	√	√		
		HFY MM1AP	√	√	√	√		
		HFZ MM1AP	√	√	√	√		
		K6C MM1AP	√	√	√	√		
		K6D SAGEM S2000	√	√	√	√		
		KFU MM6LP	√	√	√	√		
		KFW BOSCH ME7.4.4	√	√	√	√		
		KFW J34P	√	√	√	√		
		KFW SAGEM S2000	√	√	√	√		
		KFX BOSCH MP7.3	√	√	√	√		
		KFX MM1AP	√	√	√	√		
		N6A BOSCH ME7.4.4	√	√	√	√		
		N6A BOSCH ME7.4.4FLEX FUEL	√	√	√	√		
		N6A BOSCH ME7.4.5	√	√	√	√		
		NFU BOSCH ME7.4.4	√	√	√	√		
		NFU BOSCH ME7.4.5	√	√	√	√		
		NFU J35	√	√	√	√		
		NFZ BOSCH MP7.2	√	√	√	√		
		RFK MM6LP	√	√	√	√		
RFN MM6LP	√	√	√	√				
RFN MM48P	√	√	√	√				

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RFR MM48P	√	√	√	√		
	Diesel engine	8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√		
		8HZ BOSCH EDC16C3 EU	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		WJY LUCAS DCN2	√	√	√	√		
	AT	AL4 automatic gearbox	√	√	√	√		
206 +	Petrol engine	KFW J34P	√	√	√	√		
	AT	AL4 automatic gearbox	√	√	√	√		
	Petrol engine	N6A BOSCH ME7.4.5	√	√	√	√		1.Programming
		N6B BOSCH ME7.4.5	√	√	√	√		
		NFU BOSCH ME7.4.5	√	√	√	√		
		KFU MM6LPC	√	√	√	√		
		5FW MEV17.4	√	√	√	√		
		5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√		
		8FS MEV17.4	√	√	√	√		
		MEV17.4 EVO	√	√	√	√		
KFV J34P	√	√	√	√				

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207CAN	Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HX BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		8HZ BOSCH EDC16C3 EURO4	√	√	√			
		9HY BOSCH EDC16C3 EUR04 (CAN)	√	√	√	√		
	AT ECU	Multiplexed additive adding pump ECU	√	√	√			
		AL4 automatic gearbox	√	√	√	√		
		colltrolled manual gearbox(BVMP)	√	√	√	√		
	ABS	ABS MK70.1	√	√	√			
		ESP MK60-O	√	√	√			
		Built-in systems interface(BSI)	√	√	√			
	Air bag	Airbag ECU	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√			
		Air conditioning	√	√	√			
		Under inflation detection	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Power steering	√	√	√			
	Inform the driver/Audio/Communication	Muti-function display	√	√	√			
		Radio	√	√	√			
		CD player	√	√	√			
		Instrument panel	√	√	√			
		Steering wheel switching module	√	√	√			
		Telamatics	√	√	√			
		Warning light showing seat belt not fastened	√					
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
Static AFS		√	√	√				
207 VAN	Petrol engine	KFW J34P	√	√	√	√		
	Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EUR04	√	√	√	√		
	AT	AL4 automatic gearbox	√	√	√	√		
	Diesel engine	5FX MED17.4	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
3008		DCM3.5	√	√	√	√		
	AT ECU	CFC300P gearbox	√	√	√	√		
		AM6 Euro5 automatic gearbox	√	√	√	√		
		AT6 Euro5 automatic gearbox	√	√	√	√		
306		HDY BOSCH MA3.1	√	√	√			
		KFX MM1AP	√	√	√	√		
		HDZ BOSCH MA3.1	√	√	√			
		RFS MM1AP	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
306REMOD ELAGE	Petrol engine	KFX BOSCH MP7.3	√	√	√	√		
		NFZ BOSCH MP7.2	√	√	√	√		
		KFX MM1AP	√	√	√	√		
		KFX SAGEM SL96	√	√	√	√		
		LFY BOSCH MP7.3	√	√	√	√		
		LFY SAGEM SL96	√	√	√	√		
		NFT BOSCH M7.4.4	√	√	√	√		
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		NFV BOSCH M7.4.4	√	√	√	√		
	RFS MM1AP	√	√	√	√			
	WJY LUCAS DCN2	√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	WJZ LUCAS DCN2	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	AL4 Gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Accelebration pedal 4.Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
	Petrol engine	NFU BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		N6A BOSCH ME7.4.5	√	√	√	√		
		NFU BOSCH ME7.4.5	√	√	√	√		
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adapation
		RFN MM4MP2(Motorised butterfly)	√	√	√	√		
		KFU MM6LP	√	√	√	√		1.Initialization Adapation

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 VAN		RFK MM6LP	√	√	√	√		1.Initialization Adapation
		RFN MM6LP	√	√	√	√		1.Initialization Adapation
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√		
		RHS BOSCH EDC15C2	√	√	√	√		1.Service
		9HY BOSCH EDC16C3	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		8HZ BOSCH EDC16C3	√	√	√	√		
		9HX BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3 EUR04	√	√	√	√		
		RHR SIEMENS SID 803	√	√	√	√		
		RHL SIEMENS SID 803	√	√	√	√		
	ABS	TEVES MK60 ABS	√	√	√	√		
		ABS BOSCH 8	√	√	√	√	√	
		ESP BOSCH 5.7	√	√	√	√	√	
		ABS BOSCH 5.3	√	√	√	√	√	
		ESP BOSCH 8	√	√	√	√		
	A/T	BVA AL4	√	√	√	√	√	1.Marchting 2.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		
	Air bag	SAC CENTRAL	√	√	√	√		
		SAC CENT SIEMENS	√	√	√			1.Marchting

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driver information	Display/Telematics	√	√	√	√	√	
		parking assistance	√	√	√	√		
		Radio	√	√	√	√	√	
		CD player	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	
	switch control	Driver's door module	√	√	√	√		
		Passenger door module	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Marchting
		Electric pump unit(power steering)	√	√	√	√		
		Alarm	√	√	√	√	√	
		BSI	√	√	√	√	√	1.Marchting 2.key program
	A/C	Air conditioning	√	√	√	√		
	Petrol engine	N6A BOSCH ME745	√	√	√	√		1.Programming
NFU BOSCH ME745		√	√	√	√		1.Programming	
RFN MM6LP		√	√	√	√			
N6B BOSCH_ME745		√	√	√	√			
KFU MM6LP		√	√	√	√			
RFK MM6LP		√	√	√	√			
RFJ MM6LPB		√	√	√				
KFU MM6LPC		√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 CAN		NFU_Or_N6A_Or_N6B_ME749	√	√	√	√		
		NFU_Or_N6A_ME749_FLEX_FUEL	√	√	√			
		RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
	Diesel engine	RHY_BOSCH_EDC15C2	√	√	√	√		
		RHZ_BOSCH_EDC15C2	√	√	√	√		
		9HV_BOSCH_EDC16C3	√	√	√			
		9HX_BOSCH_EDC16C3	√	√	√	√		
		9HY_BOSCH_EDC16C3_EURO	√	√	√			
		9HY_BOSCH_EDC16C3_EURO4	√	√	√			
		9HZ_BOSCH_EDC16C3	√	√	√			1.Configuration
		RHR_SIEMENS_SID_803	√	√	√	√		
		RHL_SIEMENS_SID_803	√	√	√	√		
		RHL DCM3.4	√	√	√	√		
		RHR DCM3.4	√	√	√	√		
	9HT BOSCH EDC16C3	√	√	√	√			
	AT ECU	AM6L4 automatic gearbox	√	√	√	√		
		AL4 automatic gearbox	√	√	√	√		
	Active and passive safety	ABS8 BOSCH	√	√	√			
		ESP8 BOSCH	√	√	√			
		Airbag ECU	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
	Driving assistance/Comfort	Parking assistance	√	√	√				
		Air conditioning	√	√	√				
	Inform the driver/Audio/Communication	Muti-function display	√	√	√	√			
		Radio	√	√	√	√			
		CD player	√	√	√				
		Instrument panel	√	√	√	√			
		Steering wheel switching module	√	√	√	√			
		Telamatics	√	√	√				
		Vehicle protection/Management of accesses	Alarm	√	√	√			
	Driver's door module		√	√	√				
	Passenger door module		√	√	√				
	Retractable roof		√	√	√				
	Sun roof		√	√	√				
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√				
		Right headlamp beam corrector	√	√	√				
		Left headlamp beam level corrector	√	√	√				
		Driving school module	√	√					
		Steering wheel switching module	√	√	√	√			
			BSI	√	√	√			
			5FT MED17.4	√	√	√	√		
		5FW MEV17.4	√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
308	Petrol engine	5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√		
		8FS MEV17.4	√	√	√	√		
		N6A ME745	√	√	√	√		
		N6B ME745	√	√	√	√		
		NFU ME745	√	√	√	√		
		NFU ME749 Bio Flex	√	√	√	√		
		RFJ MM6KP Bio Flex(EW10A FF)	√	√	√			
		RFJ MM6LPB	√	√	√			
	Diesel engine	9HV EDC16C3	√	√	√			
		9HX EDC16C3	√	√	√	√		
		9HY EDC16C3	√	√	√	√		
		9HZ EDC16C3	√	√	√	√		
		RHL DCM3.4	√	√	√	√		
		RHR DCM3.4	√	√	√	√		
	A/T	CFC300P gearbox	√	√	√	√		
		AM6C gearbox	√	√	√	√		
		AL4 gearbox	√	√	√	√		
		AM6 Euro5 automatic gearbox	√	√	√	√		
		AT6 Euro5 automatic gearbox	√	√	√	√		
		Multiplexed additive adding pump	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Vehicle protection / Management of accesses	Alarm	√	√	√			
		Driver's door module	√	√	√			
	Air bag	Air-bag	√	√	√			
	Driving assistance/comfort	Lane departure warning	√	√	√			
		Air conditioning	√	√	√			
		Electropump assembly	√	√	√			
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√			
		Under inflation detection	√	√	√			
	Inform the driver/Audio/Communication	Multifunction screen	√	√	√			
		Radio	√	√	√			
		Instrument panel	√	√	√			
		Hands Free Kit	√	√	√			
		Not Fastened warning light(TNB)	√					
		Telematics	√	√	√			
		Steering wheel switching module	√	√	√			
		CD player	√	√	√			
		Audio amplifier	√	√	√			
		Services Module	√	√	√			
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
Discharge bulb with directional dipped headlamp		√	√	√				

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Driving school module	√					
405	Petrol engine	N6A ME7.4.4	√	√	√	√		
		N6B ME7.4.4	√	√	√	√		
		NFU ME7.4.4	√	√	√	√		
		LFY BOSCH MP7.3	√	√	√	√		
		L6A SAGEM SL96	√	√	√	√		
		1600RD SL96	√	√	√	√		
		LFZ SAGEM S2000	√	√	√	√		
		NFU J35	√	√	√	√		
406	Petrol engine	KFX SAGEM SL96	√	√	√	√		
		LFY BOSCH MP7.3	√	√	√	√		
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√		
		LFY SAGEM SL96	√	√	√	√		
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
Right Air bag	Right side airbag	√	√	√			1.Marchting	
		XFX BOSCH ME 746	√	√	√	√		
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√		
		LFY SAGEM SL96	√	√	√	√		

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406R	Petrol engine	LFY BOSCH MP7.3	√	√	√	√		
		3FZ MM4MP2	√	√	√	√		
		RFN MM48P	√	√	√	√	√	1.Initialization Adaption
		R6F MM48P	√	√	√	√		
		RFR MM48P	√	√	√	√	√	
		6FZ SAGEM S2000	√	√	√	√		
		RLZ SIEMENS IRIUS81	√	√	√	√		
	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√		
		RHS BOSCH EDC15C2	√	√	√	√		1.Service
		RHZ BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√		√	
		BSI	√	√	√	√		1.key program
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√		
	Driver information	Multi-function display	√	√	√	√	√	
		Radio	√	√	√	√	√	
		CD player	√	√	√	√		
		On-board navigation system	√	√	√	√		
Switch unit under steering wheel(COM 2000)		√	√	√	√			
Instrument panel		√	√	√	√	√		

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√			
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
406R COUPE	Petrol engine	AFX BOSCH ME 746	√	√	√	√		
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√		
		LFY SAGEM SL96	√	√	√	√		
		LFY BOSCH MP7.3	√	√	√	√		
		3FZ MM4MP2	√	√	√	√		
		RFN MM48P	√	√	√	√	√	1.Initialization Adaption
		R6F MM48P	√	√	√	√		
		RFR MM48P	√	√	√	√	√	
		6FZ SAGEM S2000	√	√	√	√		
		RLZ SIEMENS IRIUS81	√	√	√	√		
	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√		
		RHS BOSCH EDC15C2	√	√	√	√		1.Service
		RHZ BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√		√	
		BSI	√	√	√	√		1.key program

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√		
	Driver information	Multi-function display	√	√	√	√	√	
		Radio	√	√	√	√	√	
		CD player	√	√	√	√		
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√			
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
406 COUPE	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
	A/T	AL4 autoadaptive automatic Gearbox	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
		RHR SIEMENS SID803	√	√	√	√		
		RHL DCM3.4	√	√	√	√		
		RHR DCM3.4	√	√	√	√		

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
407	Diesel engine	4HP BOSCH EDC16CP39	√	√	√	√		
		4HR BOSCH EDC16CP39	√	√	√	√		
		4HS BOSCH EDC16CP39	√	√	√	√		
		4HT BOSCH EDC16CP39	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3 EUR03	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		RHL SIEMENS SID 803	√	√	√	√		
	Petrol engine	3FZ MM6LP	√	√	√	√		
		3FY MM6LPB	√	√	√	√		
		6FY MM6LPB	√	√	√	√		
		6FZ S2000PM2	√	√	√	√		
		RFN MM6LP	√	√	√	√		
		RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
		Diesel fuel additive control unit	√	√	√			
	ABS	ESP EBC 440(KWP)	√	√	√	√		
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marching 2.Oil wear counter
		4HP20 automatic gearbox	√	√	√	√		
		AM6 automatic gearbox	√	√	√	√		
		AM6 Euro5 automatic gearbox	√	√	√	√		

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Built-in systems interface(BSI)	√	√	√			
	Air bag	Airbag ECU	√	√	√	√		
	Inform the driver Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√		
		CD player	√	√	√			
		Instrument panel	√	√	√	√		
		Hands Free Kit	√	√	√			
	Vehicle protection Management of accesses	Alarm	√	√	√	√		
		Driver's door module	√	√	√	√		
		Passenger door module	√	√	√	√		
	Visibility Lighting/Signalling	Control unit windscreen wipers	√	√	√	√		
		Rain/Brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√		
	Driving assistance/Comfort	Parking assistance	√	√	√			
		Air conditioning	√	√	√			
		Under inflation detection	√	√	√			
	Petrol engine	3FZ MM4MP2	√	√	√	√		
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adaption
RFN MM4MP2(Motorised butterfly)		√	√	√	√			
R6F MM4.8P		√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
607 VAN		XFX BOSCH ME7.4.6	√	√	√	√		
	Diesel engine	RHS BOSCH EDC15C2	√	√	√	√		1.Service
		4HX BOSCH EDC15C2	√	√	√	√		
		RHZ BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	BVA ZF	√	√	√	√		
		4HP20 gearbox	√	√	√	√		
	Air bag	Air bag	√	√	√			
	Driver information	Multi-function display	√	√	√	√	√	
		Parking assistance	√	√	√	√	√	
		Instrument panel	√	√	√	√		
		CD player	√	√	√	√		
		Radio	√	√	√	√	√	
	switch control	Driver's door control panel	√	√	√	√		
		Passenger's door control panel	√	√	√	√		
	Visibility/Lighting	Headlamp height corrector	√	√	√	√	√	
		BSI	√	√	√	√	√	1.Initialization Adapation
	storing of the driving position	√	√	√	√			
	Diesel fuel additive control unit	√	√	√	√	√	1.Marchting	
A/C	Air conditioning	√	√	√	√			
Petrol engine	3FZ MM6LP	√	√	√	√			
	3FY MM6LPB	√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
607 CAN	Diesel engine	XFV ME747	✓	✓	✓	✓		
		4HP BOSCH EDC16CP39	✓	✓	✓	✓		
		4HR BOSCH EDC16CP39	✓	✓	✓	✓		
		4HS BOSCH EDC16CP39	✓	✓	✓	✓		
		4HT BOSCH EDC16CP39	✓	✓	✓	✓		
		RHL SIEMENS SID 803	✓	✓	✓	✓		
		RHR SIEMENS SID 803	✓	✓	✓	✓		
		RHS BOSCH EDC15C2	✓	✓	✓	✓		
	AT ECU	AM6 automatic gearbox	✓	✓	✓	✓		
		4HP20 automatic gearbox	✓	✓	✓	✓		
		Diesel fuel additive control unit	✓	✓	✓			
	ABS	ESP BOSCH8	✓	✓	✓			
	Air bag	Airbag ECU	✓	✓	✓			
		Built-in systems interface(BSI)	✓	✓	✓			
	Driving assistance/Comfort	Parking assistance	✓	✓	✓			
		Drivers seat memory unit	✓	✓	✓			
		Air conditioning	✓	✓	✓			
		Under inflation detection	✓	✓	✓			
		Power steering	✓	✓	✓			
	Inform the	Radio	✓	✓	✓			
		CD player	✓	✓	✓			
Instrument panel		✓	✓	✓				

PEUGEOT V40.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Steering wheel switching module	√	√	√			
		Hands Free Kit	√	√	√			
		Telamatics	√	√	√			
	Vehicle protection/Management of accesses	Alarm	√	√	√			
		Driver's door module	√	√	√			
		Passenger door module	√	√	√			
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
806	Petrol engine	R6F MM4.8P	√	√	√	√		
		RFN MM4.8P	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√		
		RHZ BOSCH EDC15C2	√	√	√	√		
Diesel engine	RHW BOSCH EDC15C2	√	√	√	√			
	RHM BOSCH EDC15C2	√	√	√	√			
	RHT BOSCH EDC15C2	√	√	√	√			
	4HW BOSCH EDC15C2	√	√	√	√			
ABS	ABR BOSCH 5.7	√	√	√	√			
	ESP BOSCH 5.7	√	√	√	√	√		
	Display/Telematics	√	√	√	√	√		
	Warning light and odometer ECU	√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
807 VAN	Driver information	Parking assistance	√	√	√	√		
		CD player	√	√	√	√		
		Instrument panel	√	√	√	√	√	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		radio/telematic receive control	√	√	√	√	√	
	Visibility/Lighting	Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Right headlamp beam corrector	√	√	√	√		
		Left headlamp beam level corrector	√	√	√	√		
	switch control	Driver's door module	√	√	√	√		
		Sliding side door	√	√	√	√		
		Passenger's door module	√	√	√	√		
	A/C	WEBASTO additional heating	√	√	√	√		
		Climate control	√	√	√	√		
	Air bag	Air bag	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√		
	Alarm	√	√	√	√	√		
	Storing of the driving position	√	√	√	√			

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		BSI	√	√	√	√		
	Petrol engine	3FZ MM4MP2	√	√	√	√		
		3FZ MM6LP	√	√	√	√		
		R6F MM4.8P	√	√	√	√		
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adapatation
		RFN MM4MP2(Motorised butterfly)	√	√	√	√		
		RFN MM6LP	√	√	√	√		1.Initialization Adapatation
XFW BOSCH ME746	√	√	√	√				
		BSI	√	√	√			
	Petrol engine	RFJ MM6LPB	√	√	√			
	Diesel engine	4HW BOSCH EDC15C2	√	√	√	√		
		4HP EDC16CP39	√	√	√	√		
		4HR EDC16CP39	√	√	√	√		
		4HS EDC16CP39	√	√	√	√		
		4HT EDC16CP39	√	√	√	√		
		RHK SIEMENS SID 803	√	√	√			
		RHL SIEMENS SID 803	√	√	√	√		
		RHR SIEMENS SID 803	√	√	√	√		
		RHM BOSCH EDC15C2	√	√	√	√		
		RHT BOSCH EDC15C2	√	√	√	√		
	RHW BOSCH EDC15C2	√	√	√	√			
	Diesel fuel additive control unit	√	√	√				

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
807 CAN	ABS	ESP ESP 8.1	√	√	√			
		ESP ESP_BOSCH8	√	√	√			
	Air bag	ESP Airbag ECU	√	√	√			
	A/T	BVA AL4	√	√	√	√		
		BVA_AM6C	√	√	√	√		
	Driving assistance/Comfort	Additional heating	√	√	√			
		Air conditioning	√	√	√			
		Driver's door module	√	√	√			
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√			
		Power steering GEP	√	√	√			
		Under inflation detection	√	√	√			
	Inform the driver/Audio/Communication	CD player	√	√	√			
		Hands Free Kit	√	√	√			
		Instrument panel	√	√	√			
		Multi-function display	√	√	√			
		Radio	√	√	√			
		Telematic receiver control	√					
		Telematics	√	√	√			
		Warning lights/odometer unit	√	√	√			
	Vehicle protection/Management of accesses	Alarm	√	√	√			
		Front sunroof	√	√	√			
		Middle sunroof	√	√	√			
Rear sunroof		√	√	√				

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Accessories	Passenger door module	√	√	√			
		Sliding side doors module	√	√	√			
	Visibility/Lighting/Signalling	Left headlamp beam level corrector	√	√	√			
		Rain/brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√			
		Steering wheel switching module	√	√	√			
Petrol engine	HDY BOSCH MA3.1	√	√	√				
	HDZ BOSCH MA3.1	√	√	√				
	HFX BOSCH M7.4.4	√	√	√	√			
	KFX BOSCH MP7.3	√	√	√	√			
	KFX MM1AP	√	√	√	√			
	KFX SGEAM SL96	√	√	√	√			
	LFX MM1AP	√	√	√	√			
	N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marching 2.Initialization Adaption	
	KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
	K6D SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
	NFU BOSCH ME7.4.4	√	√	√	√	√	1.Marching 2.Initialization Adaption	
	RFN MM6LP	√	√	√	√		1.Initialization Adaption	

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
PARTNER		KFW SAGEM S2000PM1	√	√	√	√		
		N6A BOSCH ME7.4.5	√	√	√	√		
		N6B BOSCH ME7.4.5	√	√	√	√		
		NFU BOSCH ME7.4.5	√	√	√	√		
		KFW SAGEM S2000PM2	√	√	√	√		
		HFX MM48P	√	√	√	√		
		KFW J34P	√	√	√	√		
	Diesel engine	WJY LUCAS DCN2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		9HX BOSCH EDC16C3	√	√	√	√		
		WJZ LUCAS DCN2	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
	Driver information	Instrument panel	√	√	√	√		
		CD player	√	√	√	√		
		Radio PHILIPS	√	√	√	√		
		Radio CLARION	√	√	√	√		
		BSI	√	√	√	√		1.key program
	A/C	WEBASTO additional heating	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marching
SAC CENT AUTOLIV		√	√	√				
Petrol engine	N6A BOSCH ME7.4.5	√	√	√	√			
	NFU BOSCH ME7.4.5	√	√	√	√			
	9HV BOSCH EDC16C3	√	√	√	√			

PEUGEOT V40.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
PARTNER B9	Diesel engine	9HW BOSCH EDC16C3	✓	✓	✓	✓		
		9HT BOSCH EDC16C3	✓	✓	✓	✓		
		9HX BOSCH EDC16C3	✓	✓	✓	✓		
		9HZ BOSCH EDC16C3	✓	✓	✓	✓		
EXPERT	Petrol engine	R6F MM4.8P	✓	✓	✓	✓		
		RFN MM4.8P	✓	✓	✓	✓	✓	
	Diesel engine	WJY LUCAS DCN2	✓	✓	✓	✓		
		RHW BOSCH EDC15C2	✓	✓	✓	✓		
		RHX BOSCH EDC15C2	✓	✓	✓	✓		
		RHZ BOSCH EDC15C2	✓	✓	✓	✓		
	AT	AL4 autoadaptive automatic gearbox	✓	✓	✓	✓		
	ABS	BOSCH ABS5.3	✓	✓	✓	✓		
Air bag	Air bag and seat belt	✓	✓	✓			1.Marchting	
EXPERT 2	Petrol engine	RFH MM6KP(EW10A)	✓	✓	✓	✓		
	Diesel engine	9HT BOSCH EDC16C3	✓	✓	✓	✓		
		9HU BOSCH EDC16C3-EDC16C34	✓	✓	✓	✓		
		RHG SIEMENS SID 803	✓	✓	✓	✓		
		RHL SIEMENS SID 803	✓	✓	✓	✓		
		RHR SIEMENS SID 803	✓	✓	✓	✓		
BOXER	Petrol engine	MM48p 2L essence plombee	✓	✓	✓	✓		
		MM48p 2L dual fuel(LPG)	✓	✓	✓	✓		
		MM48p 2L Unleaded petrol	✓	✓	✓	✓		

PEUGEOT **V40.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	2.0L HDI BOSCH EDC15C7		√	√	√		

(*):Tested;

(?):Manual on website(www.x431.com)

Note: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBD	For all the cars except 307/607 can model cars after 2006 cars.	N/A
OBD 16C	For all the cars except 307/607 can model cars after 2006 cars.	N/A
CANBUS II	Just test 307/607 can model cars after 2006 cars. And need to add PEUGEOT/CITROEN-16 Converter connector.	N/A
diagun connector	N/A	For all the cars.
SUPER 16	For all the cars.	N/A