

Skoda V24.71 Diagnostics List (Note:For reference only)

| MODEL | SYSTEM | TYPE | Functions | | | | | |
|-------------------|------------------------------|---------|--------------|----------|-----------|-------------|-----------|-------------------|
| | | | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Specail functions |
| Fabia | 03 Brake Electronics | (..-03) | √ | √ | √ | √ | √ | √ |
| | 03 Brake Electronics | (01-..) | √ | √ | √ | √ | √ | √ |
| | 15 Airbags | (..-03) | √ | √ | √ | √ | √ | √ |
| | 49 Auto. Lighting switch | (..-00) | √ | √ | √ | √ | √ | √ |
| | 02 Transmission Electronicsl | (..-00) | √ | √ | √ | √ | √ | √ |
| | 71 Battery charger | (..-00) | √ | √ | √ | √ | √ | √ |
| | 61 Battery control | (..-00) | √ | √ | √ | √ | √ | √ |
| | 43 BRAKER BOOST.ASSI. | (..-00) | √ | √ | √ | √ | √ | √ |
| | 46 Central Control Module | (..-00) | √ | √ | √ | √ | √ | √ |
| | CHASSIS NETWORK | (..-03) | √ | √ | √ | √ | √ | √ |
| | CLIMA | (..-03) | √ | √ | √ | √ | √ | √ |
| | CONV. TOP/SUNROO | (..-00) | √ | √ | √ | √ | √ | √ |
| | DASHBOARD | (..-00) | √ | √ | √ | √ | √ | √ |
| | DISTANCE REGULATI | (..-00) | √ | √ | √ | √ | √ | √ |
| | DRIVER FOOT BOAR | (..-00) | √ | √ | √ | √ | √ | √ |
| | DRIVER SIDE DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| | ELECTRIC ACTUATIO | (..-00) | √ | √ | √ | √ | √ | √ |
| | ELECTRIC STEERING | (..-03) | √ | √ | √ | √ | √ | √ |
| | EMERGENCY CALL | (..-00) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-00) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-00) | √ | √ | √ | √ | √ | √ |
| | FRONT CONTR.INDIC | (..-00) | √ | √ | √ | √ | √ | √ |
| | IMMOBILIZER | (..-00) | √ | √ | √ | √ | √ | √ |
| | LEFT REAR DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| LH RIGHT MODULATI | (..-00) | √ | √ | √ | √ | √ | √ | |
| PARK.BRAKE | (..-00) | √ | √ | √ | √ | √ | √ | |

Skoda V24.71 Diagnostics List (Note:For reference only)

| MODEL | SYSTEM | TYPE | Functions | | | | | |
|-------------|------------------------------|-----------|--------------|----------|-----------|-------------|-----------|-------------------|
| | | | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Specail functions |
| | PASS. SIDE DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| | PASS.FOOT BOARD | (..-00) | √ | √ | √ | √ | √ | √ |
| | PASSIVE ENTRY | (..-00) | √ | √ | √ | √ | √ | √ |
| | POWER BRAKE | (..-00) | √ | √ | √ | √ | √ | √ |
| | REAR CONTROL INDI | (..-00) | √ | √ | √ | √ | √ | √ |
| | RH LIGHT MODULATI | (..-00) | √ | √ | √ | √ | √ | √ |
| | RIGHT REAR DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| | SERVICE LIGHT RES | (99-..) | √ | √ | √ | √ | √ | √ |
| | SWITCH PANEL | (..-00) | √ | √ | √ | √ | √ | √ |
| | VOICE CONTROL | (..-00) | √ | √ | √ | √ | √ | √ |
| Favorit | ENGINE MANAGEME | (..-6/98) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-6/98) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-6/98) | √ | √ | √ | √ | √ | √ |
| Felicia | 03 Brake Electronics | (..-03) | √ | √ | √ | √ | √ | √ |
| | 15 Airbags | (..-03) | √ | √ | √ | √ | √ | √ |
| | 02 Transmission Electronicsl | (..-00) | √ | √ | √ | √ | √ | √ |
| | 46 Central Control Module | (..-00) | √ | √ | √ | √ | √ | √ |
| | CHASSIS NETWORK | (..-03) | √ | √ | √ | √ | √ | √ |
| | CLIMA | (..-03) | √ | √ | √ | √ | √ | √ |
| | DASHBOARD | (..-00) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| IMMOBILIZER | (..-00) | √ | √ | √ | √ | √ | √ | |
| Forman | ENGINE MANAGEME | (..-6/98) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-6/98) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-6/98) | √ | √ | √ | √ | √ | √ |
| | 03 Brake Electronics | (01-..) | √ | √ | √ | √ | √ | √ |
| | 03 Brake Electronics | (04-..) | √ | √ | √ | √ | √ | √ |

Skoda **V24.71** Diagnostics List (Note:For reference only)

| MODEL | SYSTEM | TYPE | Functions | | | | | |
|-------|------------------------------|---------|--------------|----------|-----------|-------------|-----------|-------------------|
| | | | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Specail functions |
| | 15 Airbags | (..-03) | √ | √ | √ | √ | √ | √ |
| | 15 Airbags | (04-..) | √ | √ | √ | √ | √ | √ |
| | 25 Immobilizer | (..-00) | √ | √ | √ | √ | √ | √ |
| | 49 Auto. Lighting switch | (..-00) | √ | √ | √ | √ | √ | √ |
| | 02 Transmission Electronicsl | (..-00) | √ | √ | √ | √ | √ | √ |
| | 7D Auxiliary Heater | (04-..) | √ | √ | √ | √ | √ | √ |
| | 71 Battery charger | (..-00) | √ | √ | √ | √ | √ | √ |
| | 61 Battery control | (..-00) | √ | √ | √ | √ | √ | √ |
| | 43 BRAKER BOOST.ASSI. | (..-00) | √ | √ | √ | √ | √ | √ |
| | CENTRAL ELECTRIC | (04-..) | √ | √ | √ | √ | √ | √ |
| | 46 Central Control Module | (..-00) | √ | √ | √ | √ | √ | √ |
| | CHASSIS NETWORK | (..-03) | √ | √ | √ | √ | √ | √ |
| | CLIMA | (..-03) | √ | √ | √ | √ | √ | √ |
| | CLIMA | (04-..) | √ | √ | √ | √ | √ | √ |
| | COMFORT SYSTEM | (..-03) | √ | √ | √ | √ | √ | √ |
| | COMFORT SYSTEM | (04-..) | √ | √ | √ | √ | √ | √ |
| | CONV. TOP/SUNROO | (..-00) | √ | √ | √ | √ | √ | √ |
| | CONV. TOP/SUNROO | (04-..) | √ | √ | √ | √ | √ | √ |
| | CRUISE CONTROL | (..-00) | √ | √ | √ | √ | √ | √ |
| | DASHBOARD | (..-00) | √ | √ | √ | √ | √ | √ |
| | DASHBOARD | (04-..) | √ | √ | √ | √ | √ | √ |
| | DRIVER FOOT BOAR | (..-00) | √ | √ | √ | √ | √ | √ |
| | DRIVER SIDE DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| | DRIVER SIDE DOOR | (04-..) | √ | √ | √ | √ | √ | √ |
| | ELECTRIC ACTUATIO | (..-00) | √ | √ | √ | √ | √ | √ |
| | ELECTRIC STEERING | (..-03) | √ | √ | √ | √ | √ | √ |
| | ELECTRIC STEERING | (04-..) | √ | √ | √ | √ | √ | √ |
| | EMERGENCY CALL | (..-00) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |

Skoda **V24.71** Diagnostics List (Note:For reference only)

| MODEL | SYSTEM | TYPE | Functions | | | | | |
|-------------------|-------------------|---------|--------------|----------|-----------|-------------|-----------|-------------------|
| | | | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Specail functions |
| Octavia | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (04-..) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-00) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-00) | √ | √ | √ | √ | √ | √ |
| | FRONT CONTR.INDIC | (..-00) | √ | √ | √ | √ | √ | √ |
| | HEADLIGHT LEVEL | (..-03) | √ | √ | √ | √ | √ | √ |
| | IMMOBILIZER | (..-00) | √ | √ | √ | √ | √ | √ |
| | IMMOBILIZER | (04-..) | √ | √ | √ | √ | √ | √ |
| | LEFT REAR DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| | LEFT REAR DOOR | (04-..) | √ | √ | √ | √ | √ | √ |
| | LH RIGHT MODULATI | (..-00) | √ | √ | √ | √ | √ | √ |
| | PARK.BRAKE | (..-00) | √ | √ | √ | √ | √ | √ |
| | PASS. SIDE DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| | PASS. SIDE DOOR | (04-..) | √ | √ | √ | √ | √ | √ |
| | PASS.FOOT BOARD | (..-00) | √ | √ | √ | √ | √ | √ |
| | PASSIVE ENTRY | (..-00) | √ | √ | √ | √ | √ | √ |
| | POWER BRAKE | (..-00) | √ | √ | √ | √ | √ | √ |
| | RADIO / CD | (04-..) | √ | √ | √ | √ | √ | √ |
| | REAR CONTROL INDI | (..-00) | √ | √ | √ | √ | √ | √ |
| | RH LIGHT MODULATI | (..-00) | √ | √ | √ | √ | √ | √ |
| | RIGHT REAR DOOR | (..-00) | √ | √ | √ | √ | √ | √ |
| | RIGHT REAR DOOR | (04-..) | √ | √ | √ | √ | √ | √ |
| | SEAT/MIRROR POS. | (..-00) | √ | √ | √ | √ | √ | √ |
| | SERVICE LIGHT RES | (..-00) | √ | √ | √ | √ | √ | √ |
| | SERVICE LIGHT RES | (04-..) | √ | √ | √ | √ | √ | √ |
| SERVICE LIGHT RES | (99-..) | √ | √ | √ | √ | √ | √ | |
| STEERING WHEEL | (..-00) | √ | √ | √ | √ | √ | √ | |
| STEERING WHEEL | (04-..) | √ | √ | √ | √ | √ | √ | |

Skoda V24.71 Diagnostics List (Note:For reference only)

| MODEL | SYSTEM | TYPE | Functions | | | | | |
|------------------|---------------------------|---------|--------------|----------|-----------|-------------|-----------|-------------------|
| | | | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Specail functions |
| | SWITCH PANEL | (..-00) | √ | √ | √ | √ | √ | √ |
| | TRACTION CONTROL | (..-00) | √ | √ | √ | √ | √ | √ |
| | TV SYSTEM | (..-00) | √ | √ | √ | √ | √ | √ |
| | VOICE CONTROL | (..-00) | √ | √ | √ | √ | √ | √ |
| Pick-up | 03 Brake Electronics | (..-03) | √ | √ | √ | √ | √ | √ |
| | 15 Airbags | (..-03) | √ | √ | √ | √ | √ | √ |
| | 7D Auxiliary Heater | (..-00) | √ | √ | √ | √ | √ | √ |
| | 46 Central Control Module | (..-00) | √ | √ | √ | √ | √ | √ |
| | CLUTCH ELECTRONI | (..-00) | √ | √ | √ | √ | √ | √ |
| | DASHBOARD | (..-00) | √ | √ | √ | √ | √ | √ |
| | DRIVER SEAT CONTR | (..-00) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | ENGINE MANAGEME | (..-03) | √ | √ | √ | √ | √ | √ |
| | IMMOBILIZER | (..-00) | √ | √ | √ | √ | √ | √ |
| | PARKING HELP | (..-00) | √ | √ | √ | √ | √ | √ |
| | RADIO / CD | (..-03) | √ | √ | √ | √ | √ | √ |
| SUSPENSION CONTR | (..-00) | √ | √ | √ | √ | √ | √ | |

(*):Tested;

(?):Manual on website(www.x431.com)

NOTE:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD

| CONNECTOR | X431/TOOL | DIAGUN |
|------------------|-------------------------------------|---------------------------------|
| OBD 16C | Skoda Model of non-CAN BUS protocol | N/A |
| CANBUS II | All Skoda Models with 16PIN DLC | N/A |
| SUPER 16 | All Skoda Models with 16PIN DLC | N/A |
| diagun connector | N/A | All Skoda Models with 16PIN DLC |